

# AH-1

## UHF PLL Plug-On Transmitter

### Product Manual



#### 1. System operation instructions

- Before connecting to power, make sure the voltage marked on equipment is the same as that on the power socket.
- Do not place the equipment in damp and hot environment.
- Prior to operation, please dry your hands.
- Keep the equipment away from fire and heat source.
- Transmitter and receiver need to be adjusted to the same "default channel" or "frequency".
- Caution: The suitable environment for this product is with a temperature between -10°C (14°F) and +50°C (122°F).

#### 2. Features

- 2400 to 3000 selectable frequencies.
- Preset 15 groups each of up to 63 compatible channels.
- Phase-Locked Loop (PLL) synthesized tune.
- Extended dynamic range and smooth frequency response.
- Adjustable transmission power between Low and High.
- The panel Lock-On function prevents tampering and RF interruption.
- Full-color LCD display.
- Provide 12V & 48V phantom power.
- Selectable polarity assignment for the audio input connector.
- Comes with rechargeable lithium-battery.
- Supports USB Type C fast charging.
- Compatible with 2.4GHz auto pairing: UF-20R, UF-20S.


#### 3. Specification

|                          |  |
|--------------------------|--|
| Frequency Preparation    | PLL Synthesized Control  |
| Frequency Setting        | JTS patented obstacles-free RF REMOSET   |
| Carrier Frequency Range  | UHF 470~960 MHz  |
| Bandwidth                | 75MHz Wideband (MAX)   |
| RF Outputs               | Low / High   |
| Stability                | <±10KHz  |
| Frequency Deviation      | ±48KHz (Peak)  |
| LCD Display              | Group, Channel, Frequency, Remoset, User Name, Phantom Power, Polarity, Pad Control, Low Cut, Sensitivity, Battery Status, Mute, Key Lock                          |
| Controls                 | Power ON/OFF, Frequency, Group, Sensitivity, Low Cut, Device ID, Remoset, RF Power, Light Time, User Name, Reset, Key Lock, Mute, Low Cut, Phantom Power, Polarity |
| Input Connector          | XLR  |
| Spurious Emissions       | <-50 dBC   |
| Audio Frequency Response | 50Hz~18kHz   |
| Battery                  | Lithium-ion battery / AM3 AA*2   |
| Charging Method          | Charger, Type C(Lithium battery only, NiMH battery not supported)  |
| Dimension (mm)           | 40mm(W)x 130mm(H)x 40mm(D)   |
| Weight                   | 320g   |
| Note                     | Actual product specifications may vary depending on region.  |

#### 4. Parts Identification & Accessories


##### Front panel

- LED status display  
Green: power on / Blue: Remoset transmitting (approximately 5 seconds)  
Red: battery low / Flashing red: mute  
Flashing red, green: battery low and mute
- ▲, ▼: up and down buttons to select the desired function of the handheld device.
- XLR Input Connector
- Locking ring
- Full-Color LCD display
- SET: set and save handheld transmitter.
- Power  
(1) Transmitter on/off  
Power on: push the Power button.  
Power off: push and hold the Power button for two second till the display shows "Power Off."  
(2) Mute: the transmitter is in use (with main screen on display)  
To mute: Short push the Power button display.  
To cancel: Short push the Power button display again.  
(3) Exit Setting Menu:  
Already in the Setting Menu: push the Power button to return to main screen.  
Already in a function setting: push the Power button to return to the Setting Menu and again to return to the main screen.
- LED charging ndicator: If the battery is in charging mode, the indicator light would be red. If the battery is fully charged, the indicator light would turn to green.
- USB Type C port
- Battery Compartment Cover
- Battery Holder Cover Latch

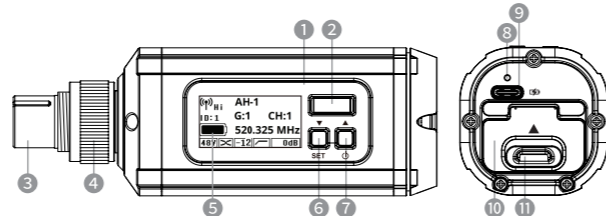


##### Description of Transmitter LCD display

- Transmission Power: Hi (High) and Lo (Low)
- Remoset ID: from 0 to 255
- Battery Indicator: in 5 levels
- Phantom Power: OFF, 12V, 48V
- Input Polarity: Positive, Negative
- Pad Control: 0dB, -6dB, -12dB, -18dB four sections
- Low Cut indication
- Sensitivity: -15dB~ +15dB, 1dB step
- Current Frequency
- Current Group / Channel
- User Name

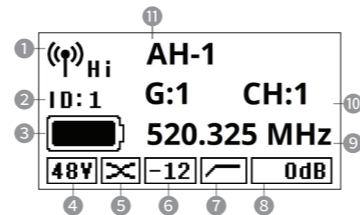


##### Battery Replacement Instructions

- Push the battery holder cover latch upward.
- Press the battery holder all the way down, and it will pop out.
- Remove the battery holder to replace the battery.
- Insert the battery holder along the track.
- Slowly push it inward.
- When you hear a click, it means that it is locked in place.
- Close the battery holder cover to complete the process.

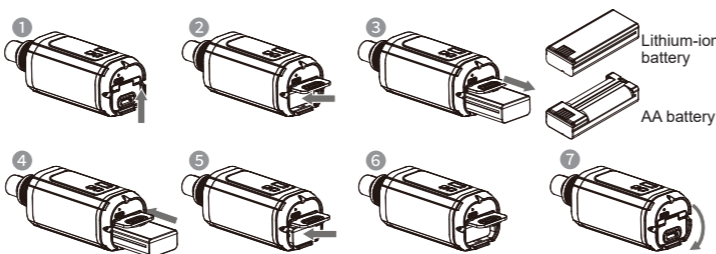


##### Microphone Installation Instructions

- Insert AH-1 into a microphone or audio device with an XLR connector.
- When you hear a click, it means that it is locked in place.
- Tighten the locking ring to complete the installation.

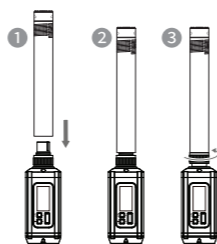

##### Accessories

- Charging Cable
- Lithium-ion battery
- AA Battery Holder
- NiMH Rechargeable Battery **Option**

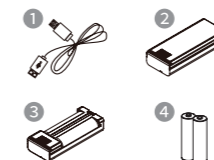

#### 5.Operation

##### Parameter setting

Press the SET button for 2 seconds to enter the setting mode. By pressing the SET button repeatedly, you can enter different setting items in order, then you can press ▲/▼ button to set the parameters, and press SET again to save the setting and leave. Press the Power button to not save and return to the previous page.

##### 1.Radio

|               |                   |                 |
|---------------|-------------------|-----------------|
| (1) Frequency | 1MHz per unit     | Select with ▲/▼ |
|               | 0.025MHz per unit | Select with ▲/▼ |

|                   |              |                           |
|-------------------|--------------|---------------------------|
| (2) Group/Channel | G (group)    | Select default group1~6   |
|                   | CH (channel) | Select default channel(s) |

 
|              |          |               |
|--------------|----------|---------------|
| (3) RF Power | Select ▲ | High RF power |
|              | Select ▼ | Low RF power  |

(4) Return: to main menu


##### 2.Audio

(1) Sensitivity: Press ▲/▼ to select the Sensitivity. The range of sensitivity is -15dB~+15dB. 1dB step.

|             |          |     |
|-------------|----------|-----|
| (2) Low Cut | Select ▲ | ON  |
|             | Select ▼ | OFF |



 
(3) Pad Control: Press ▲/▼ to select the Pad Control. 0dB, -6dB, -12dB and -18dB four sections.




(4) Phantom Power: Press ▲/▼ to select the Phantom Power. 48V, 12V and OFF.



|                    |          |          |
|--------------------|----------|----------|
| (5) Input Polarity | Select ▲ | Positive |
|                    | Select ▼ | Negative |

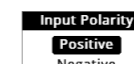

|                 |          |                      |
|-----------------|----------|----------------------|
| (6) Manual Mute | Select ▲ | Enable mute control  |
|                 | Select ▼ | Disable mute control |

 


※After enabling the mute function, you can turn it on/off by pressing the Power button when not in the setting mode.

(7) Return: to main menu

##### 3.Remoset
 
|             |                          |   |
|-------------|--------------------------|---|
| (1) Remoset | <input type="checkbox"/> | Frequency can be matched to the transmitter.    |
|             | <input type="checkbox"/> | No frequency can be matched to the transmitter. |













|               |                          |   |
|---------------|--------------------------|---|
| (2) Enable ID | <input type="checkbox"/> | The ID must be the same as the transmitter in order to pair with the transmitter. |
|               | <input type="checkbox"/> | Pair with the transmitter regardless of the transmitter ID.                       |

(3) Remoset ID: Press ▲/▼ to select 0~255.

(4) Save and exit: Save the setting value and return to the main menu.

        
(5) Exit without save: Do not save the setting value and return to the main menu.

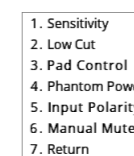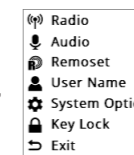

(Table content already included in the previous block)

#### 4.User Name

 Press ▲/▼ to select the characters. After confirmation, press SET to select the next character. After confirmation, press SET to save the setting. If no character is needed, select the first "space". There is a total of 10 characters for setting. Press SET until the 10th word and it will be saved after leaving the setting.



#### 5.System Option

 
(1) Light Time: Press ▲/▼ to select the backlight time. You can select "OFF", 5~30 seconds (having 5 seconds as the unit of change).



(2) Screen Color: You can select Screen Color style: color, dark, light, etc.



(3) Language: Press ▲/▼ to select the Language in English or 中文.



(4) Factory Reset


|     |                          |
|-----|--------------------------|
| YES | Restore factory settings |
| NO  | Cancellation             |



(5) Return: to main menu

#### 6.Key Lock
 
|          |        |
|----------|--------|
| Select ▲ | Lock   |
| Select ▼ | Unlock |



※ When the screen is locked, you can press and hold the SET button to enter this page and select "Unlock" to release the lock of buttons.

#### 7.Return

#### 6. Product notes

- To get the best signal performance, please keep at least 3 meters between a receiver and a transmitter.
- Keep a receiver and transmitter from other metal object for at least 50cm.
- To prevent feedback and whistle, please do not aim transmitter to speaker.
- It is suggested to hold the middle section of transmitter (microphone) body to achieve the best pickup effect.
- When transmitter is not used for a long time, please remove batteries from battery compartment to avoid leakage of electrolyte solution to damage transmitter.
- When replacing batteries, please replace two batteries at the same time and use the same brand of battery, to assure the best power performance.

#### 7. Important Notice

- JTS offers wireless systems in a selection of bands that conform to the different government regulations of specific nations or geographic regions. These regulations help limit radio frequency (RF) interference among different wireless devices and prevent interference with local public communications channels, such as television and emergency broadcasts.
- For information on bands available in your area, consult your local dealer or phone JTS. More information is also available at JTS's website (www.jts.com.tw).
- This Radio apparatus may be capable of operating on some frequencies not authorized in your region. Please contact your national authority to obtain information on authorized frequencies and RF power levels for wireless microphone products.

**JTS** JTS® PROFESSIONAL CO., LTD.
   
 No. 148, 9th Industry Road, Ta-Li Industrial Park,
   
 Taichung City 41280, Taiwan.
   
 Tel: 886-4-24938803 Fax: 886-4-24914890
   
 E-mail: jts@jts.com.tw [www.jts.com.tw](http://www.jts.com.tw)